

# Electric Multi colors Wall Furnace Manual

## Cautions

1. During use, it is forbidden to cover or touch the outlet.
2. It is forbidden to plug sundries into the outlet to avoid fire.
3. Blankets, clothes, curtains, paper and other flammable products to be more than 1M from the air outlet.
4. Please unplug the power when you don't use this product for a long time.
5. If damage is found to the power cord and plug, please stop using it.
6. If you find smoke inside the fireplace, fire flowers and other abnormal phenomena, please stop using.
7. This product is not suitable for use in outdoor, bathroom, laundry room and other possible contact with water space.
8. Fireplaces with heating function can not be shared with other appliances.
9. Fireplace with heating function, if you need to extend the line, the length of the extension line should not exceed 6 meters, with 2 square or more than 2 square wire.

## Power supply parameters

Voltage: 220V~240V Frequency: 50~60Hz Power: 750~1500W


## Key plate operation

① "⏻" is power. Plug in the power plug and press "⏻", the display shows "ON", the device starts up. Press again, the display shows "OFF", the device is off. When the display shows "ON", press the "⏻" key for 2 seconds. Switch the display to 1H. In this case, the timer is set to close mode. Press "⏻", time can be set to 1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h, 9h. After the selected time, the display will turn off after 5 seconds, and the timing setting is successful. The last "OH" is invalid and cancel the timing function.

② "🔥" is to switch flame and wood color. Press it and the display shows: C0, C1, C2, C3, C4, C5, C6, C7, C8, 8, C9, -9. Each display switches to a different color. C0: orange C1: red C2: yellow C3: purple C4: green C5: blue C6: light blue C7: white C8: the color gradient shift from C0 to C7. "-8": the fixed color when switching colors during flashing gradient. C9: the breath gradient mode of color between C0 and C7 "-9": the fixed color when switching colors during breath gradient mode.

③ "↕" is for each color brightness adjustment. When "🔥" is set at C0~C7, press "↕" to display the brightness adjustment of L1~L8. L1 is the lowest brightness, L8 is the highest brightness. When "🔥" is set to C8 and C9, press "↕". The display displays F0~F8. At this time, it is the speed mode of color switch. F0 is the fastest, F8 is the slowest.

④ "🌬️" is heating mode, press it. It shows L0, low heating 750W power. There is a 5-second delay in heating. Press the display again, it shows H1, high grade heating 1500W power. Press it again, the display displays "--" to turn off the heating mode. After turning off the heat, the fan has 20 seconds to dissipate heat and blow cold air.

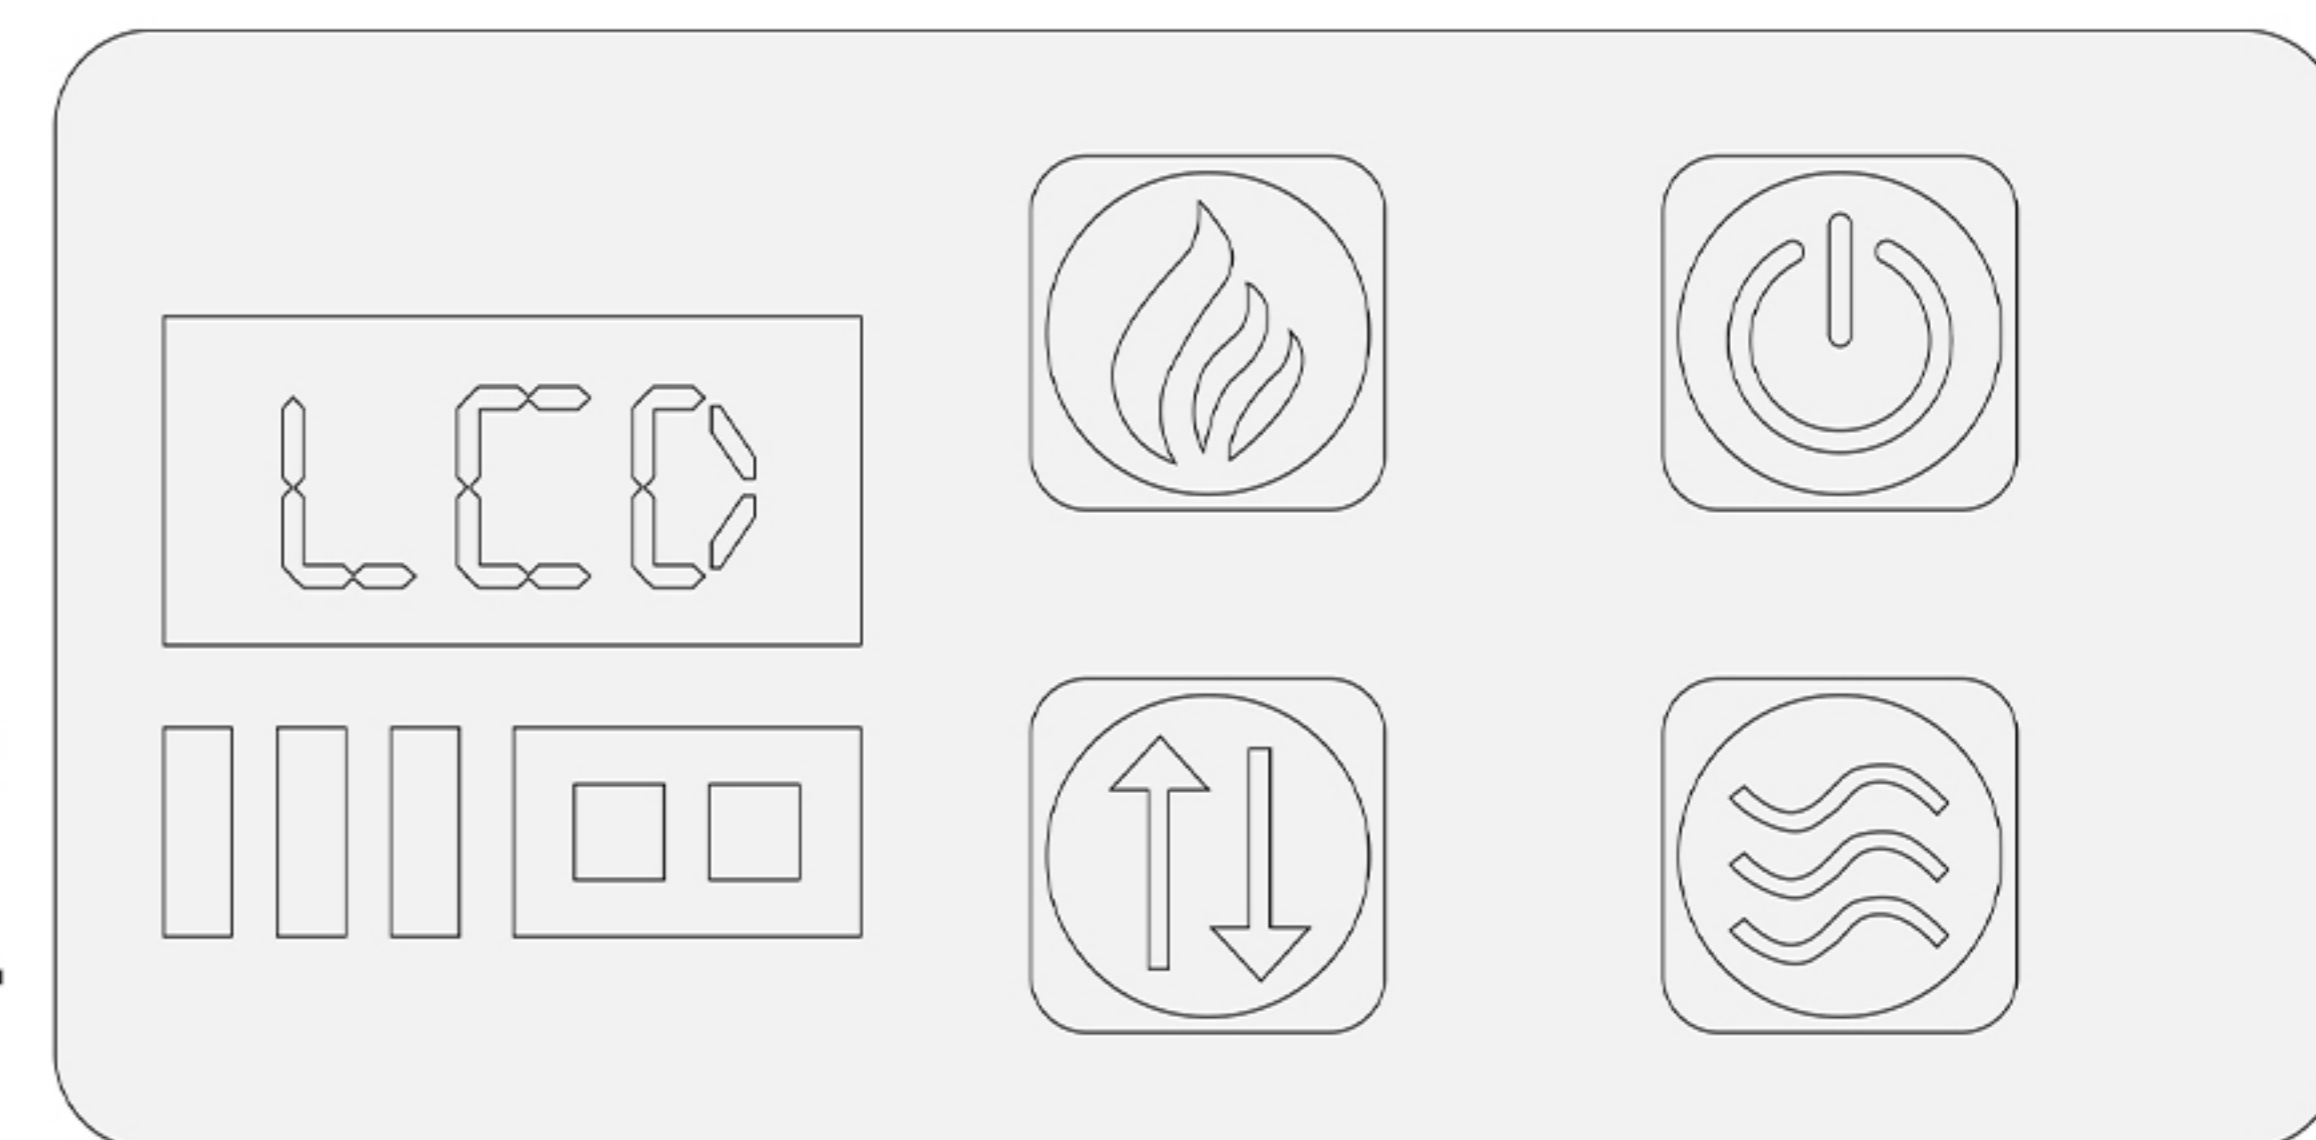

### Remote control instruction

- 1) "ON" is POWER ON
- 2) "OFF" is POWER OFF
- 3) "▲" is Increase brightness
- 4) "▼" is Reduce brightness
- 5) "①" Red flame
- 6) "②" Green flame
- 7) "③" Blue flame
- 8) "④" White flame
- 9) "⑤" Yellow flame
- 10) "⑥" Purple flame
- 11) "⑦" Orange flame
- 12) "Jump" Color flashing gradient key
- 13) "Shade" Color breathing gradient key
- 14) "Shade+" Increase the speed of color gradient
- 15) "Shade-" Reduce the speed of color gradient



Note: because the remote control is far away from the furnace core, the timing function and heating function are not formulated.

## Bluetooth Stereo manual

### The detailed operation

1. VOL- key (previous song/volume reduction) in the MP3 state VOL- short press for the previous song, long press for volume reduction; In FM state, short press to upward one station; Under bluetooth function, short press for bluetooth previous song, long press for volume reduction.
2. AUTO button (Play / pause): Press AUTO to play / pause in MP3 state; Short press in FM state to play/pause. Long press for automatic receiver coexist; Short press on Bluetooth to play / pause.
3. VOL+ button (next song / volume increase): in the MP3 state VOL+ short press for the next song, long press for volume increase; In the state of FM, short Press to next station; Under Bluetooth function, short press for bluetooth next song, long press for volume reduction.
4. MODE button: switch between USB/SD/FM/AUX/ Bluetooth.

